



## Step1

Assemble the charger socket in order.

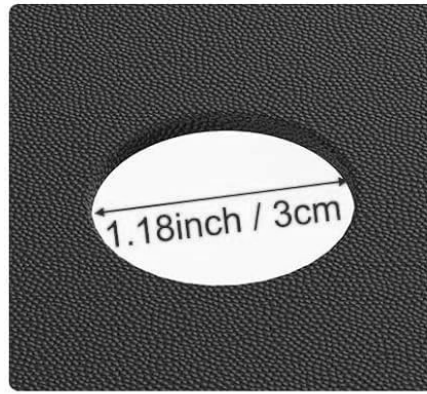

## Step3

Screw out the ring on the charger. Connect red wire to silver plug(" +") and black wire to golden plug("-").

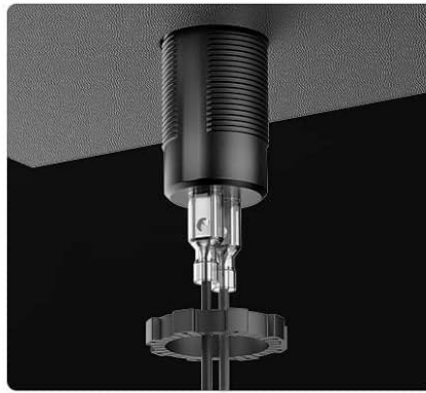

## Step5

Screw down and finish.

## Step2

Drill a hole with 1.18inch / 3cm diameter



## Step4

Put the charger into the hole and screw it tightly with the ring.

